

MEASURING AN INSIDE CORNER

STAIR PITCH (angle)

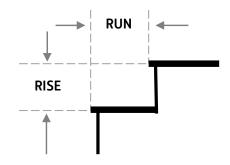

Measure the rise and tread run as shown and use the table to determine the pitch in degrees.

	RUN (Tread) (in)							
RISE (in)	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0
6.0	35.2	33.7	32.3	31.0	29.7	28.6	27.6	26.6
6.5	37.4	37.4	34.4	33.0	31.8	30.6	29.5	28.4
7.0	39.5	39.5	36.4	35.0	33.7	32.5	31.3	30.3
7.5	41.4	41.4	38.3	36.9	35.5	34.3	33.1	32.0
8.0	43.3	43.3	40.1	38.7	37.3	36.0	34.8	33.7
8.5	45.0	45.0	41.8	40.4	39.0	37.7	36.5	35.3

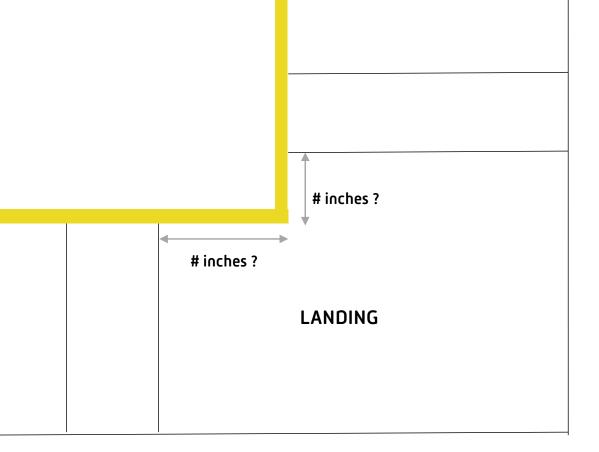

Problems? Call 888-992-4943 x301

Promenaid® handrails and grab bars are guaranteed for five years against all manufacturing defects. Installation must be performed by qualified personnel.

