

CHANNELGRIP CONNECTOR INSTALLATION





- Insert Channelgrip connector(s) into handrail tubing
- Install single longitudinal set screw first and tighten securely
- Install two side-by-side set screws and tighten securely

SINGLE BEND INSTALLATION

- Clamp two halves of bend together with socket screws. The screws should thread easily
- When job is complete and ALL screws are fully tightened, insert plastic plugs. Once inserted they cannot be removed

ADJUSTABLE BEND INSTALLATION

- **IMPORTANT** - the two outer bends must be identical
- Assemble the three bends but do not fully tighten the socket screws
- Keeping the two outer bends aligned and immobile, rotate the middle bend to add or subtract its angle from the sum of the angles of the outer bends
- When the desired angle is achieved, rotate the entire assembly in the opposite direction until it aligns with the railing tubes
- Tighten the socket screws completely, ensuring that the two outer bends are still aligned with each other
- When job is complete and ALL screws are fully tightened, insert plastic plugs. Once inserted they cannot be removed

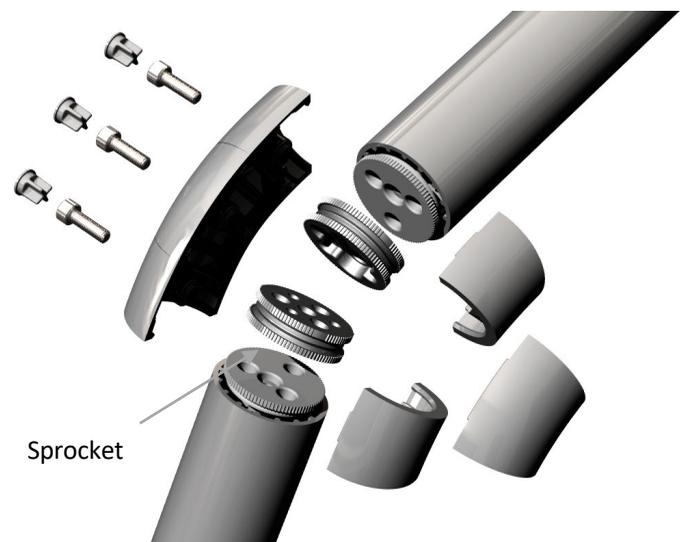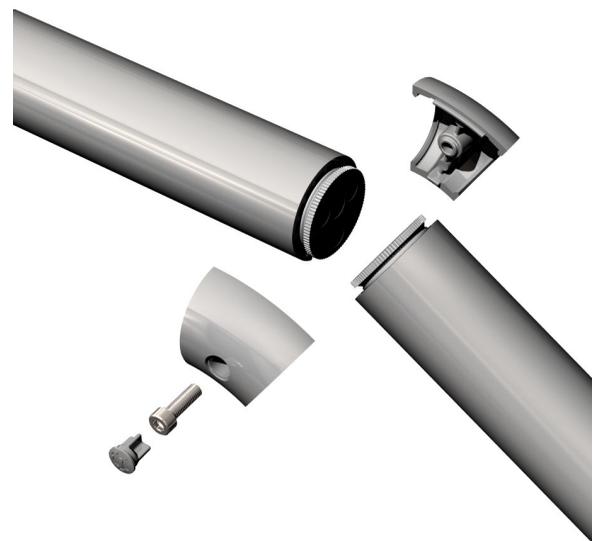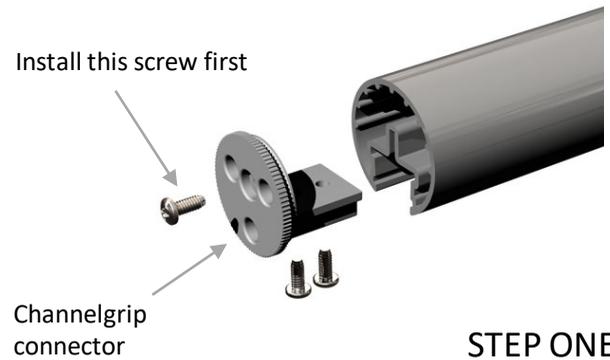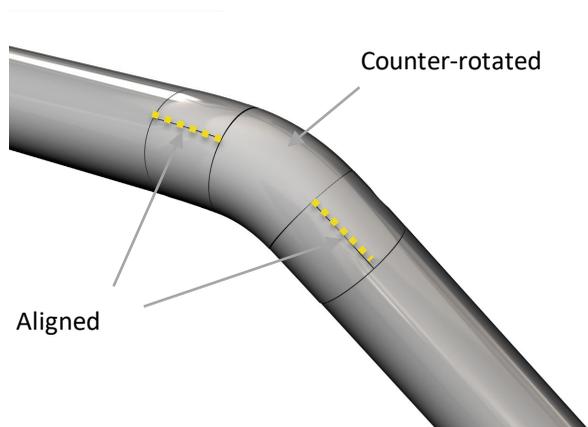

Problems? Call 888-992-4943

Promenaid® handrails and grab bars are guaranteed for five years against all manufacturing defects. Installation must be performed by qualified personnel.