


PROMENAID® INTEGRA™ GRAB BAR WITH SPROCKETLOCK™ TECHNOLOGY

promenaïd®

INSTALLATION GUIDE

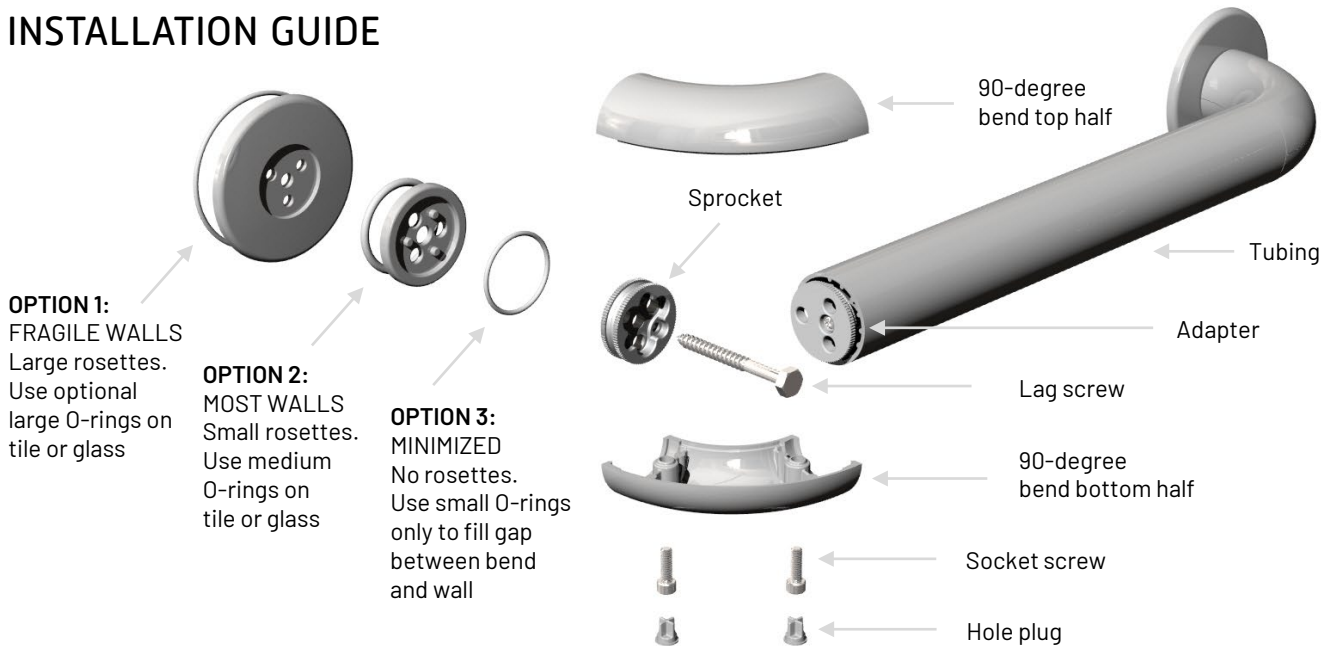

1 ASSEMBLE PARTS TEMPORARILY TO LOCATE MOUNTING POINTS ON WALL

Install bottom halves only of 90-degree bend assemblies on grab bar tubing, and place sprockets in bends. Locate grab bar on wall and mark center holes of sprockets.

IMPORTANT: Sprockets should be attached to wooden studs or other structural members for safety. Toggle bolts may be used on metal studs or hollow structures with sufficient strength, but not on drywall alone.*

2 ATTACH SPROCKETS TO WALL

Wooden studs - drill 3/16" pilot holes and use supplied 1/4" x 2-1/2" lag screws. Tighten securely.
Other structural members - Use fasteners rated for at least 250 lbs pullout strength and follow manufacturer's instructions.

Option 1: For fragile walls (e.g. plaster or thin tile), sandwich large rosettes between sprocket and wall. Install Large O-rings on tile or glass, or where water seal is required.

Option 2: For most walls, use small rosettes. Install medium O-rings on tile or glass, or for water seal.

Option 3: For flangeless effect, install no rosettes and use small O-rings to fill gap between bend and wall.

3 FINAL ASSEMBLY

Attach both halves of 90-degree bends together, joining sprockets to adapters on grab bar tubing. The lip of the 90-degree bend must fit in the sprocket V-groove that is closest to the wall. Rotate tubing so anti-slip vinyl is facing the wall. Install socket screws with hex key. The screws should thread easily. Install hole plugs.

IMPORTANT: Make sure that the installation is 100% to your satisfaction and that all screws are fully tightened before inserting hole plugs, as once installed they cannot be removed.

* To align sprockets with wall studs, or for other functional or aesthetic reasons, it may be desirable to modify the length of the grab bar. Integra™ grab bar tubing can be easily trimmed with a standard miter saw. Before trimming, remove the vinyl anti-slip extrusion and the pre-installed adapters from the grab bar tubing by undoing the set screws. After trimming the tube with a miter saw, reinstall the adapters by inserting and tightening the single set screw on the end before installing the other two screws. Cut the vinyl to length with a sharp knife or scissors and press it back into place.

Problems? Call 888-992-4943

Promenaïd® handrails and grab bars are guaranteed for five years against all manufacturing defects. Installation must be performed by qualified personnel.